



PARTS LIST 01/98

KEY N.	DESCRIPTION	QUANT.
01	DISENGAGEMENT ROD	1
02	ROD SPRING	1
03	ROD SLIDE	1
04	ROD LOCK	1
05	LOCK SCREW	1
06	SLIDE SCREW	1
07	EL. WINCH SHAFT	1
08	PLASTIC SPACER	1
09	SHAFT CONNECTION	1
10	CONNECTION SCREW	2
11	S.STEEL WASHER	1
12	PLASTIC WASHER	1
13	DECK BASE SCREW	8
14	DECK BASE	1
15	PACKING RING	1
16	BALL BEARING	1
17	UPPER COUPLING	1
18	O-RING	1
19	CUP	1
20	LOWER COUPLING	1
21	S.L. RING	1
22	RING SCREW	3
23	RING SPRING	3
24	BOX SCREW	4
25	DISENGAGEMENT BOX	1
26	PLASTIC WASHER	1
27	GEARBOX SHAFT	1
28	SPLINE	1
29	PLASTIC SPACER	1
30	GEARBOX	1
31	NUT	2
32	MOTOR FLANGE	1
33	MOTOR	1
59	O-RING CUP	1

